



# Sony DVP-FX730 Screen Replacement

This guide shows how to remove the screen from the monitor.

Written By: Oliver Woolsoncroft



## INTRODUCTION

If the device is on but nothing shows up on the screen, the screen may need to be replaced.


---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Monitor

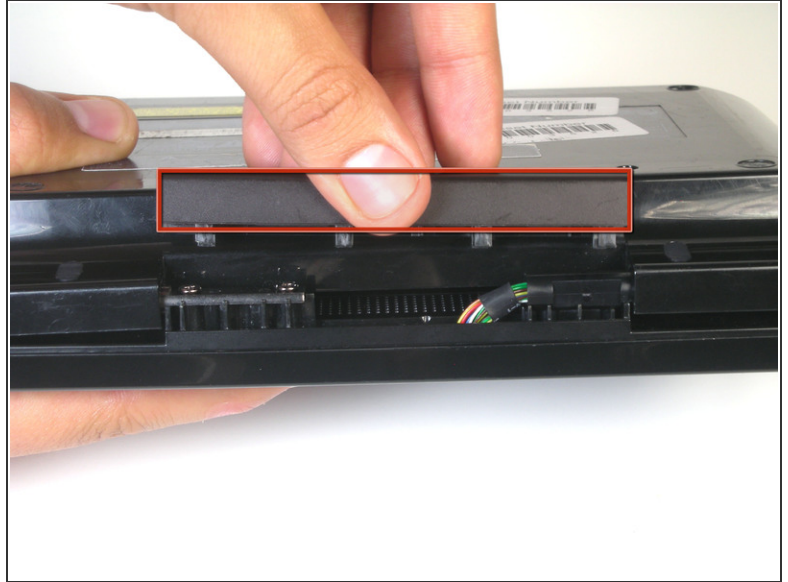

- Use your hand to remove the small back cover.

## Step 2



- Remove the two 0.473" pan head screws as shown circled in the picture





## Step 3





- The screen should now detach from the main device.
- ⚠ The screen will still be connected by the wires

## Step 4

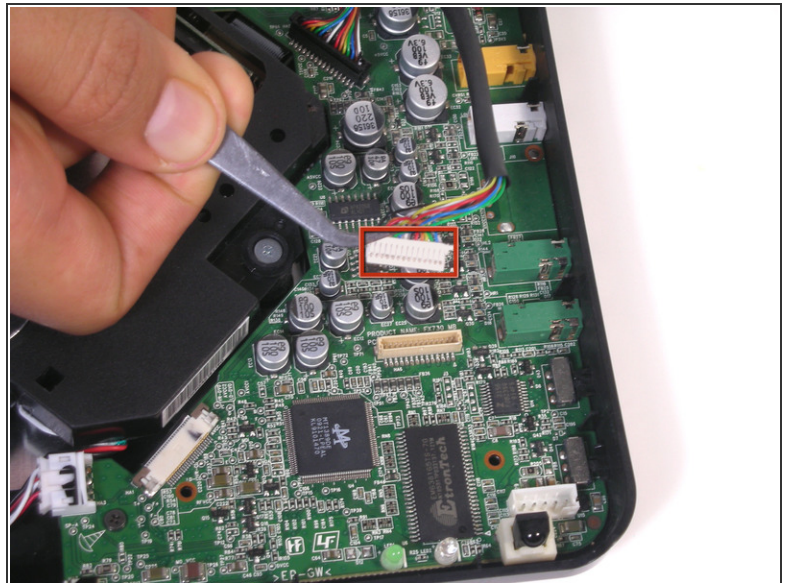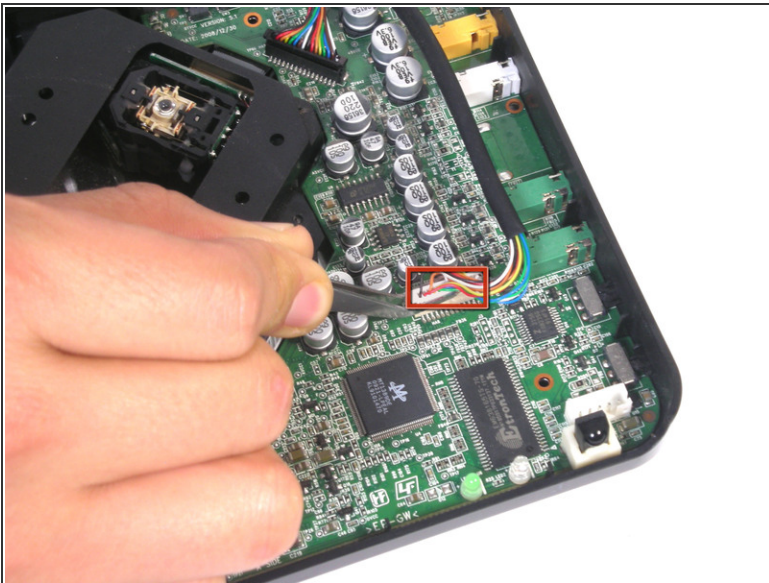

- Remove the wires attached to the white base by using the tweezers

## Step 5

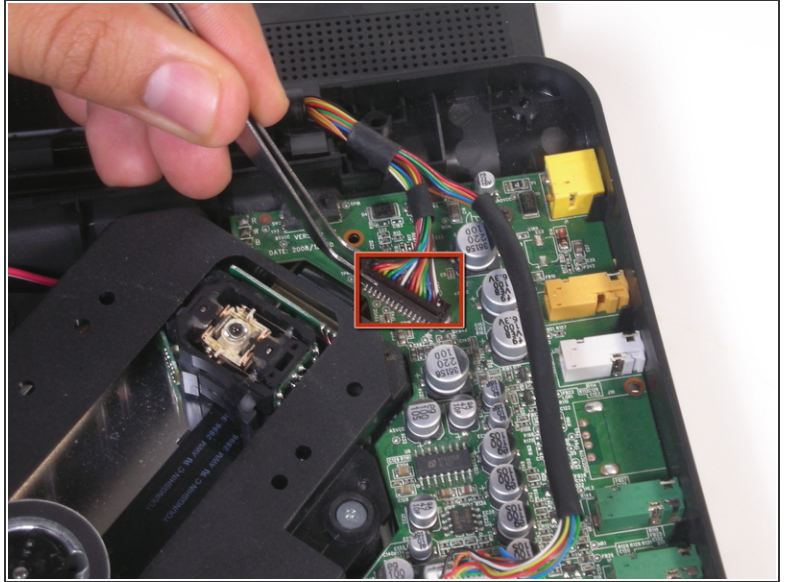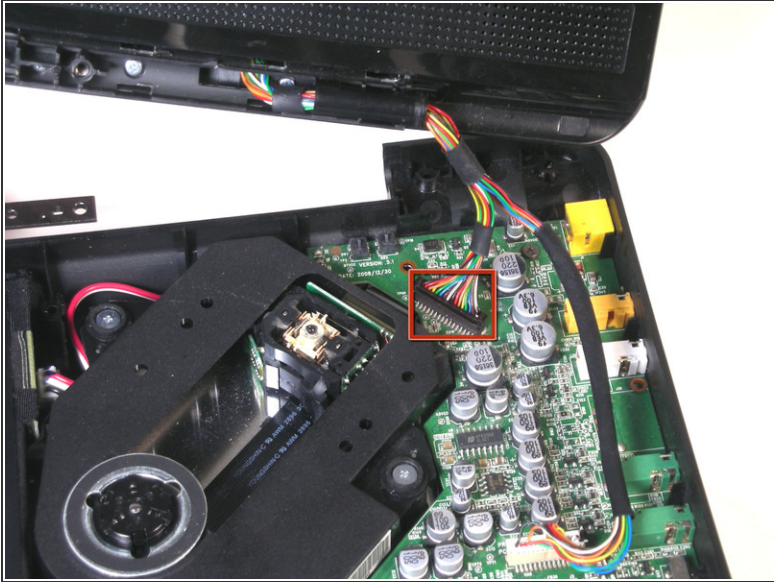

- Do the same with the wires attached to the black base.

## Step 6



- The screen should now be completely separated from the main device.

## Step 7 — Screen



- Remove the rubber feet and the screws underneath.
- Remove the two exposed screws.
- Pull back cables to expose the screw and then remove it.


## Step 8



- Using the spudger, separate the top and bottom covers.



## Step 9

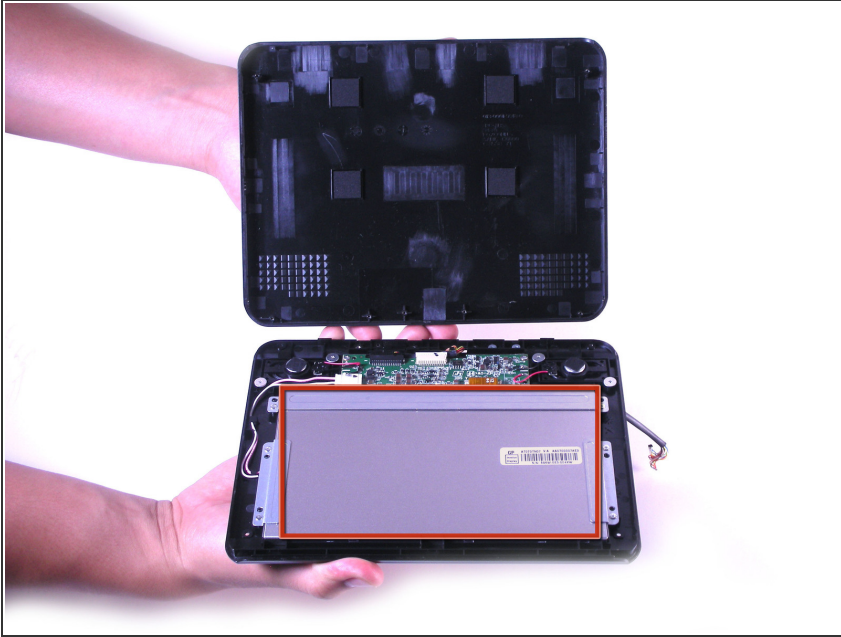


- Identify the gray back of the screen.

## Step 10





- Remove the screws.

## Step 11

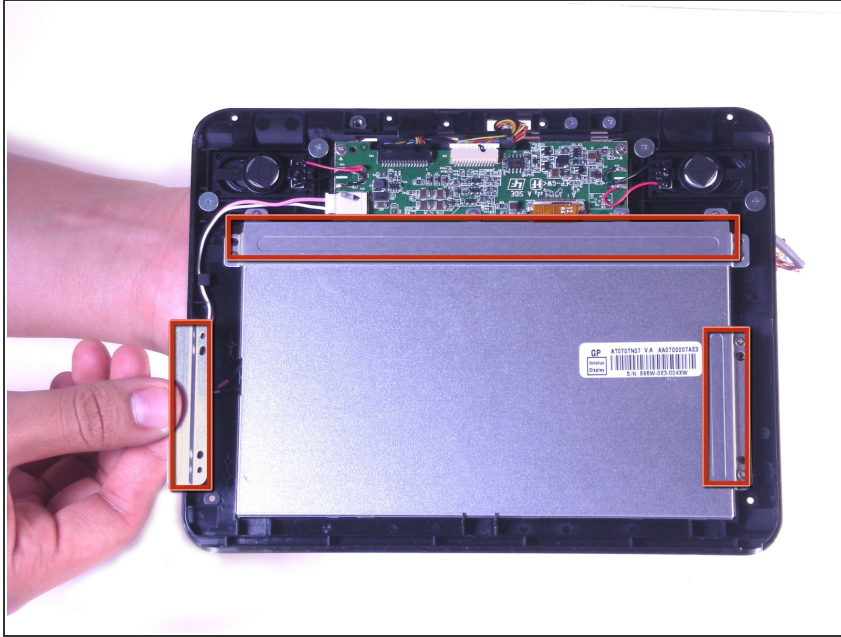

- Remove the metal plates.

## Step 12

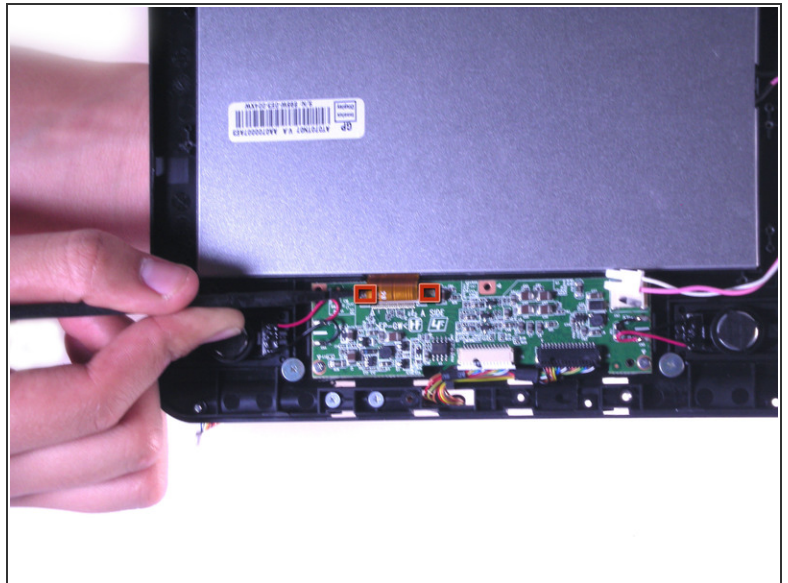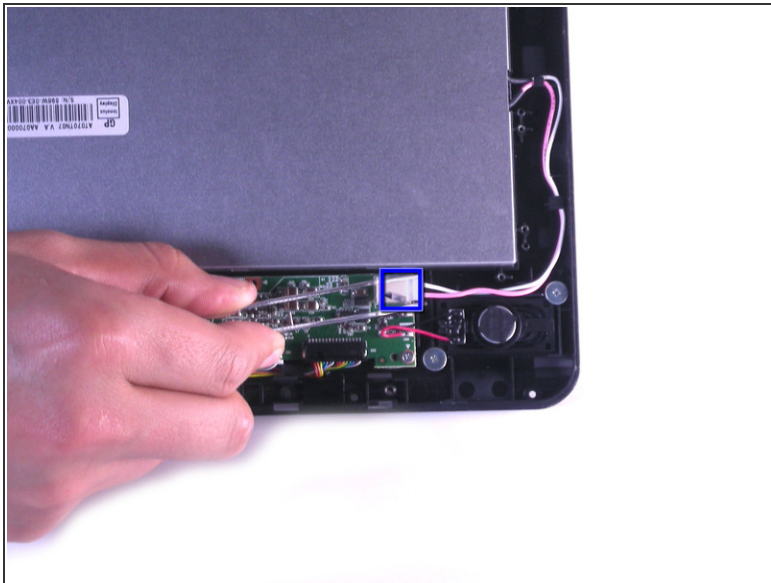

- Using spudger, push the lock clips to unlock the ribbon cable.
- Using tweezers, pull the connector loose.



## Step 13



- Place your hand on the front of the screen and push upwards.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-08-08 08:38:42 PM.